

## **Instruktion för hydraulventil pool-lock v5**

---

**Placera drivenhet (B) på höger sida I kassetten och retrumman på vänster sida.**

**1 .**




**Demontera skyddspluggar**

**2 .**



**Ta specialskruv (M6/M8-70mm lång och montera på 2 m 6 muttrar dra åt dom så att dom låser sig, nu kan styr bulten monteras.**


**5**

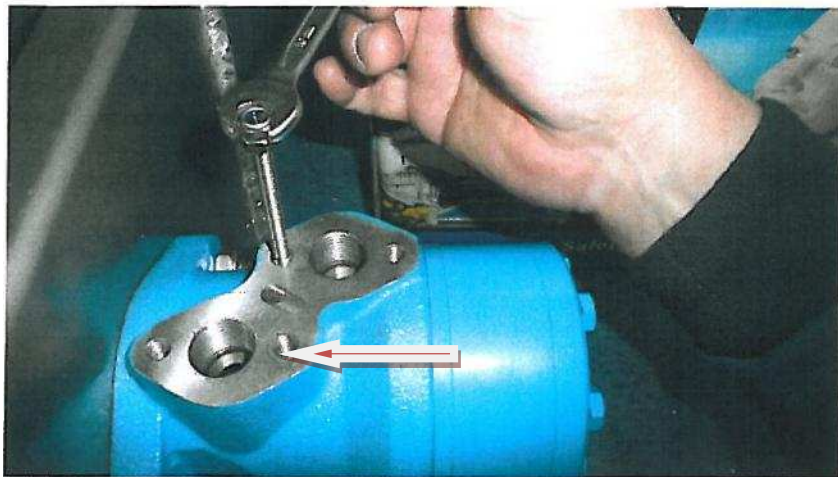

**OBS!** Montera M6/M8 skruv I hålet som pilen visar, dubbelkolla med ventilen som monteras där, den har ett hål som är 6 mm.

**OBS!** kontrollera innan montering **BILDEN** är fel

**3**

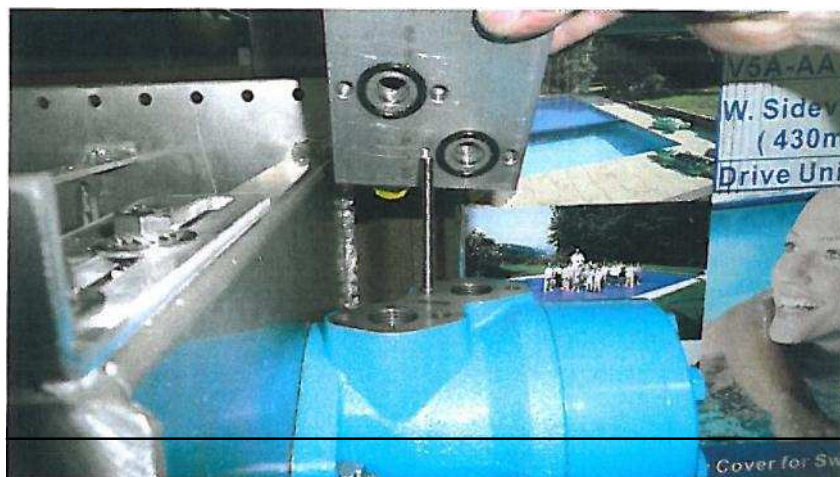

Ta bort skyddsplasten från ventilen OBS! var noga med att o-ringarna är kvar på sin plats.

**5 .**




**Låt ventilen glida ner på styrbulten m6 fixera med resterande 3 st M8 bultar.**

**6 .**




**Dra alla bultar väl med insexnyckel.**

**7.**

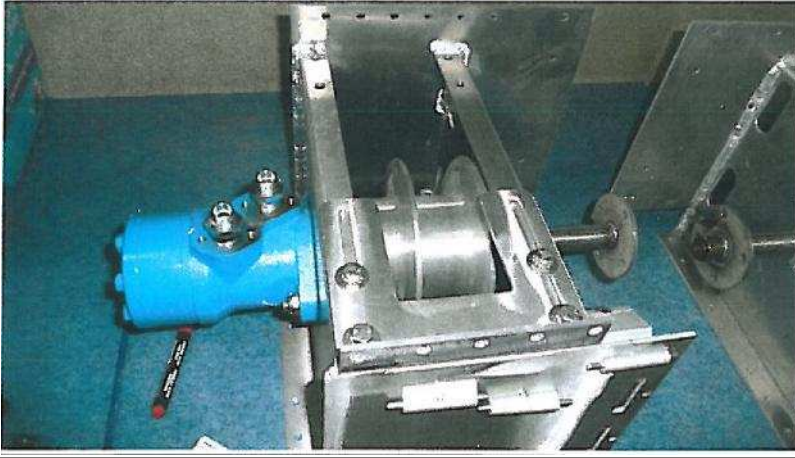


**På drivenhet (A) med reptrumma på vänster sida monteras medföljande raka nipplar.**


Drive A  
Rope L

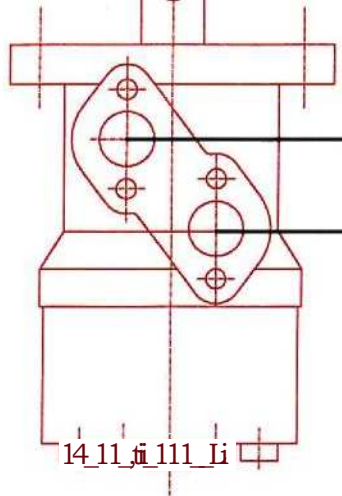

Hy. No. 1




Drive B  
Sidevice

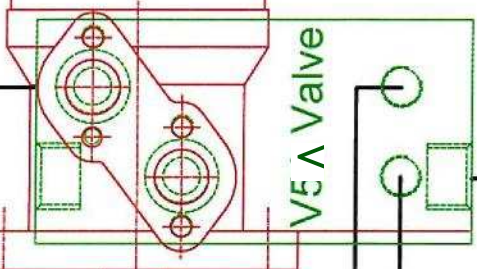

itemEnCEECLbLi

Ports  
G3/8"

Power  
Pack

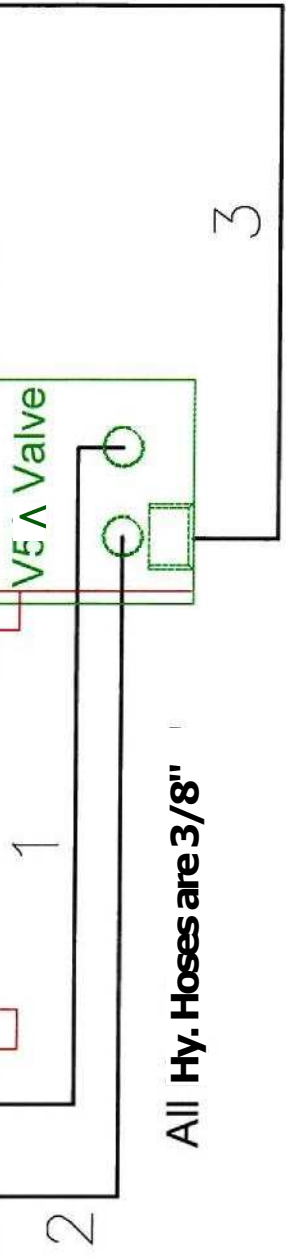

All Hy. Hoses are 3/8"

**V5A SYSTEM  
with HYDRAULIC  
VALVE**

- 1 Connecting hydraulic hose.  $L_{11} = TT + 1300mm$
- 2 Connecting hydraulic hose.  $L_{22} = TT + 1300mm$
- 3 Hydraulic hose to power pack. Length = Based on  $L_{33}$
- 4 Hydraulic hose to power pack. Length = Based on  $L_{44}$

\* PP = Power Pack

**For UNDER Mech.**